HEY YOU, LET ME HELP!

Share, inspire, have fun!
With CTOUCH by your side.

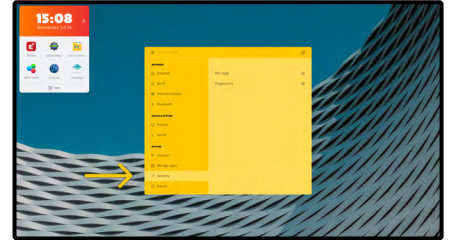CTOUCH®

CTOUCH®

CONTENT

2

SCAN A FINGERPRINT

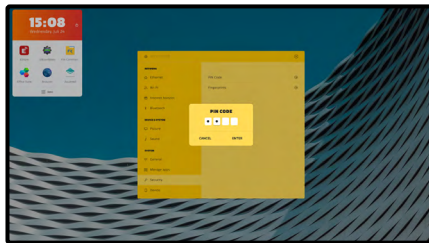**Open** the Float Bar
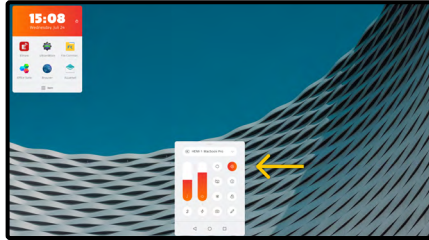
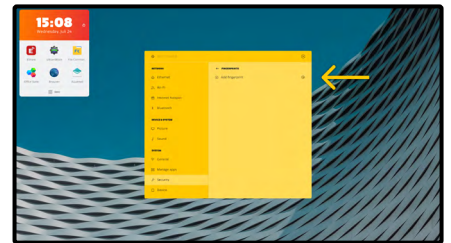**Go to** the Settings Menu

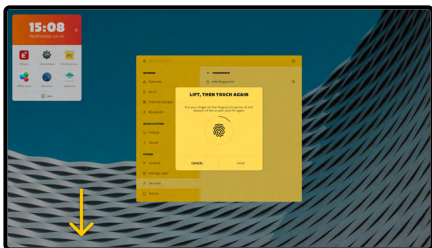**Go to** Security
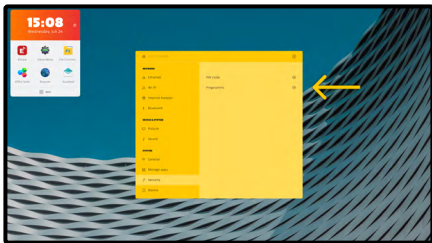
Go to Fingerprints

Fill in the PIN code of the display

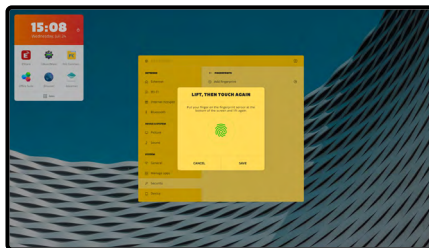**Select** Add Fingerprint

3

Follow the instruction on the pop-up screen: place your finger on the finger scanner module.

    a. A notification will appear when you are moving your finger (too) fast or when your finger is not placed correctly on the finger scanner module.

    b. **Note**: The scanner is located at the bottom of your screen on the outside - You do not need to place your finger on the fingerprint that you see on the screen to scan.
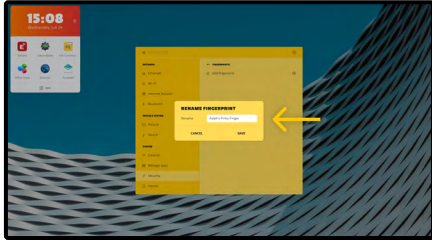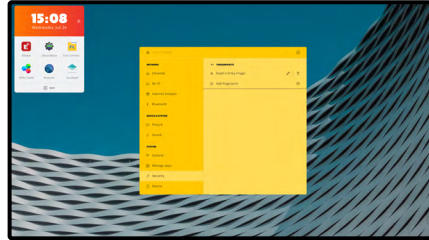

When the scan of your finger is completed successfully, the icon on the pop-up will become green.
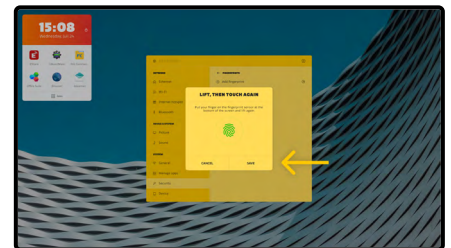
Then **press save** to save your fingerprint.

Rename the fingerprint, to make it clear which fingerprint is of which finger/user.
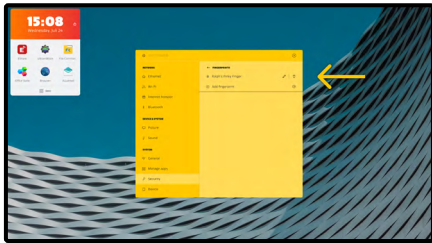
Your fingerprint has been stored successfully.

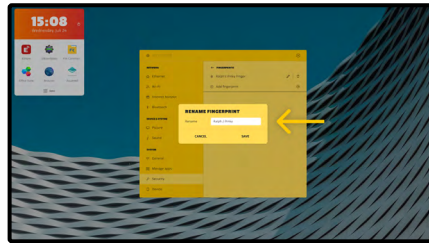**Note**: you can save up to 10 fingerprints on the display.

Note: For accessing your OPS computer you need to follow the steps of Windows.
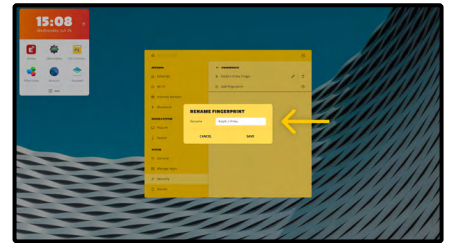
4

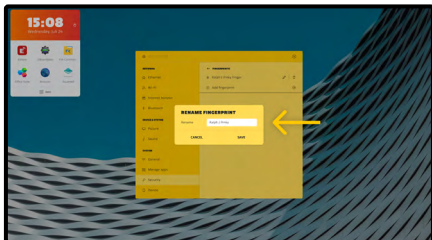# RENAME A SAVED FINGERPRINT

If you want to **change the name** later on, click on the pen icon.
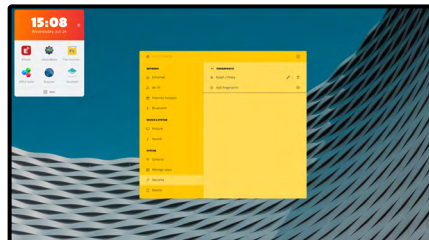

Delete the current name
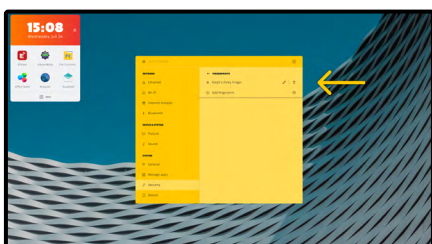

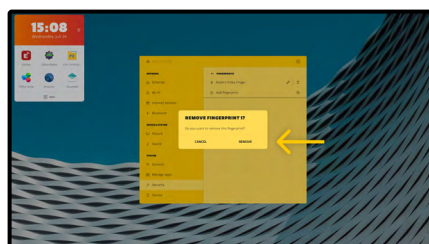**Fill in** the requested name

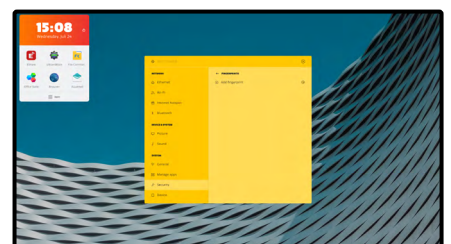**Press** on save

The new name is saved.

DELETE A SAVED FINGERPRINT

If you want **to delete a fingerprint**, click on the bin icon.

Click on remove in the pop-up window

The fingerprint is deleted.

CTOUCH®

ctouch.eu